Installation Manual

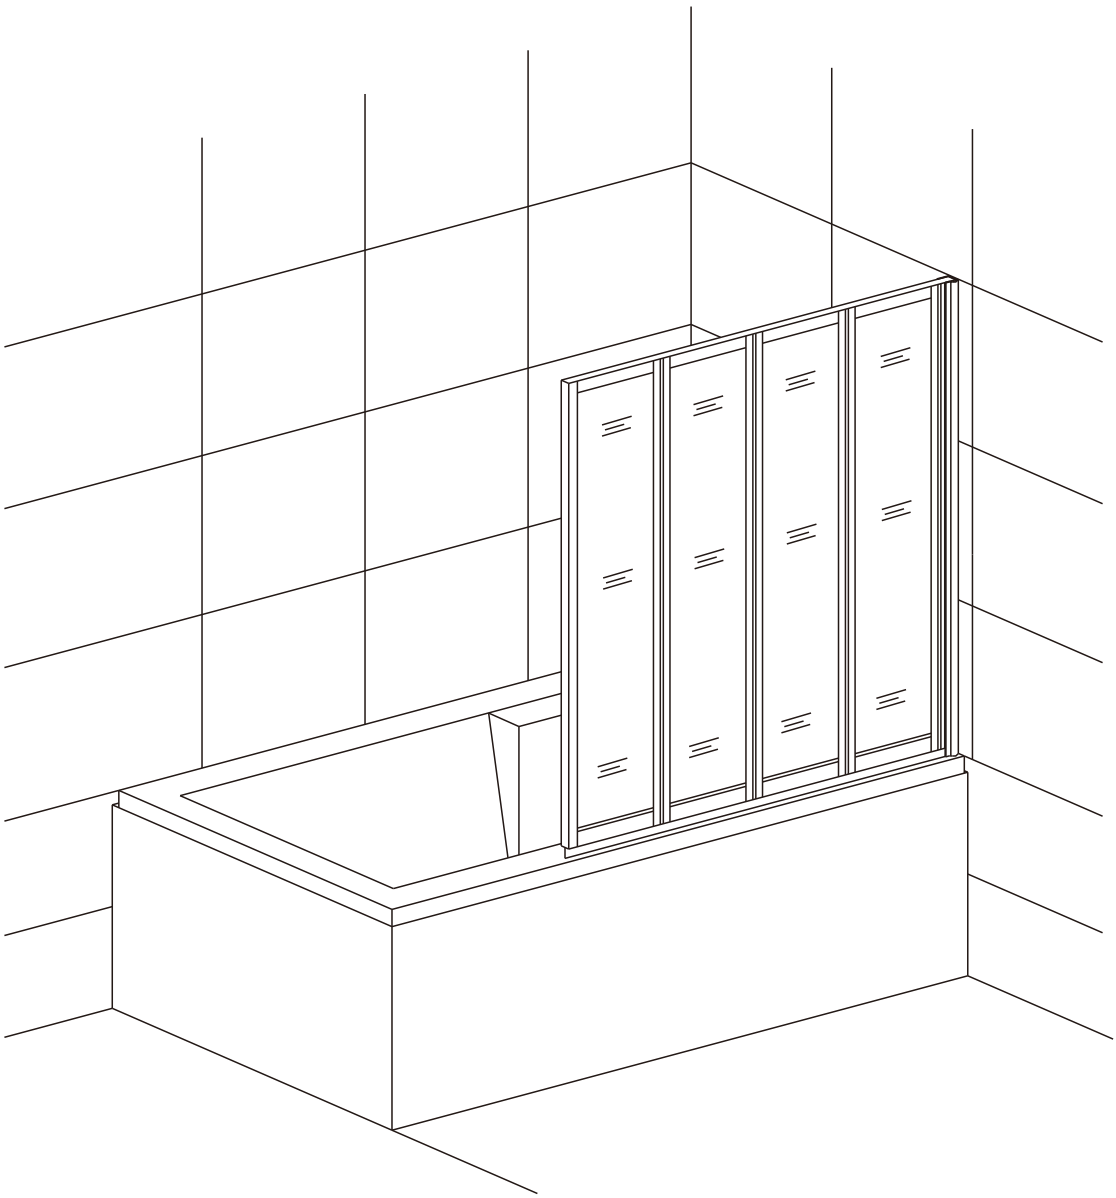

CAUTIONS

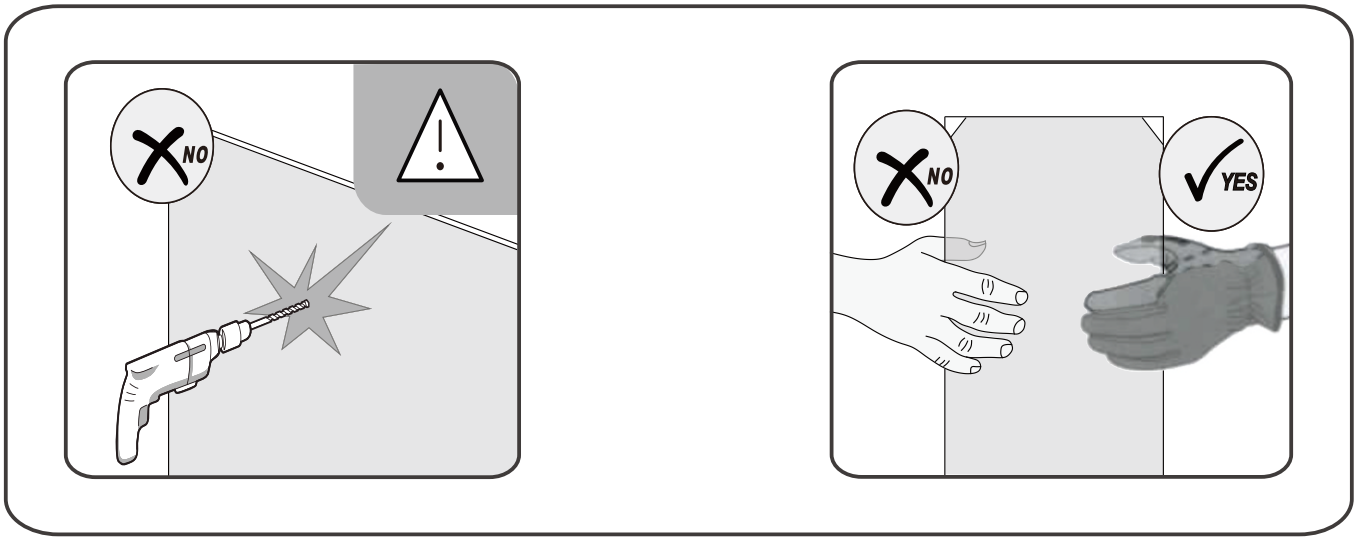

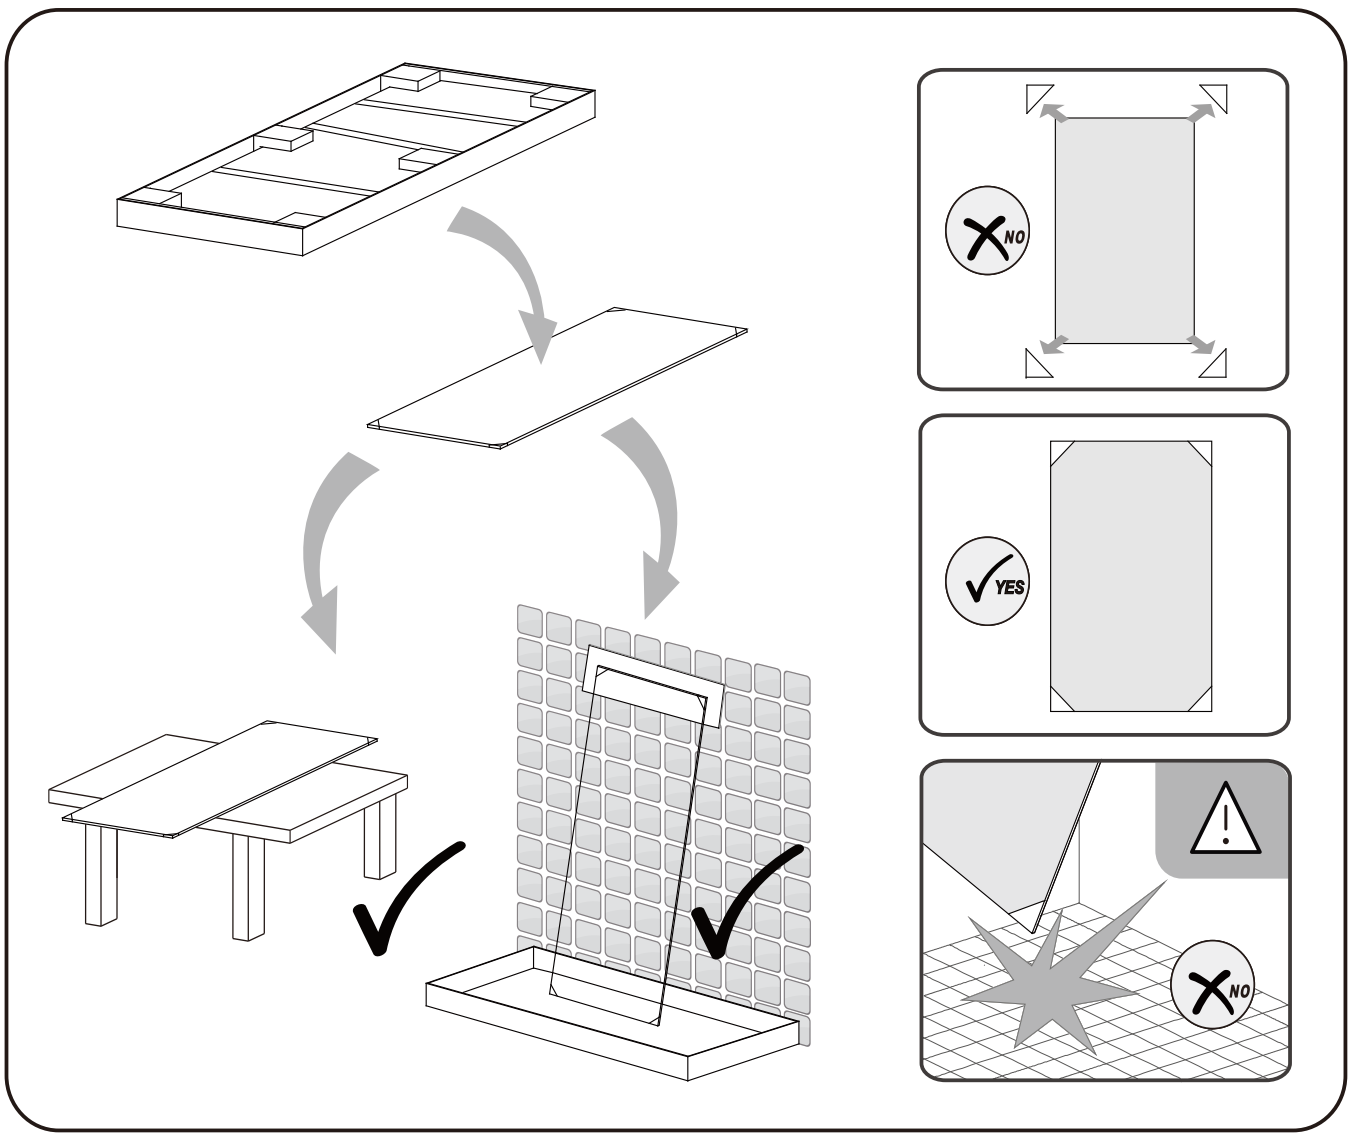

TOOLS REQUIRED

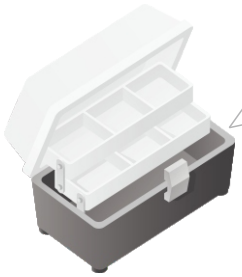



PENCIL

(⌀6 ⌀3.2)
DRILL BIT

SILICONE & GUN



FLAT HEAD & CROSS
HEAD SCREWDRIVER



TAPE MEASURE

SPIRIT LEVE

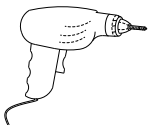

DRILL





RUBBER HAMMER

PACKING LIST

A I-432  X3	B ST5*30  X3	C ST4*10  X2	D I-062 X2	E I-065 X2
F B-149  X1				

PRODUCT SCHEMATIC DIAGRAM

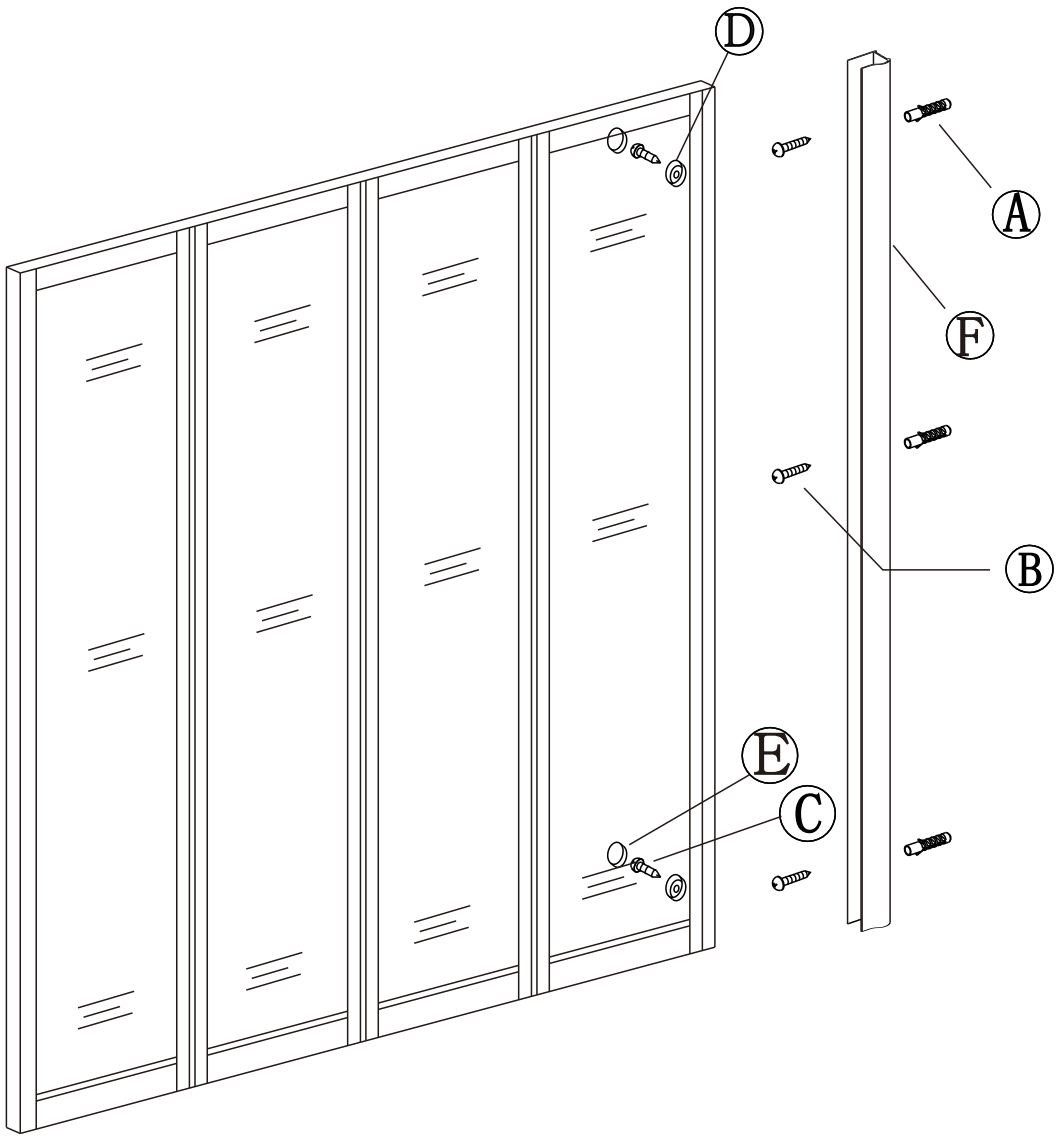

1

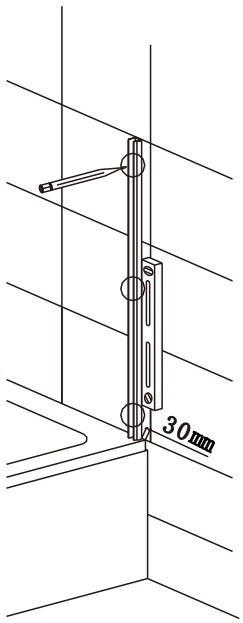

Ⓕ x1

2

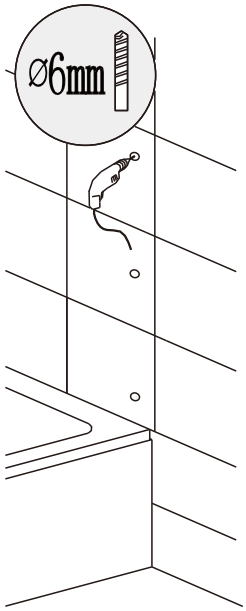

3

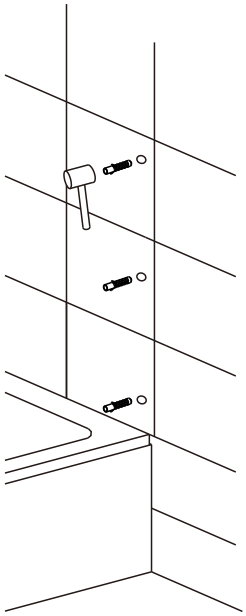

Ⓐ x3

4

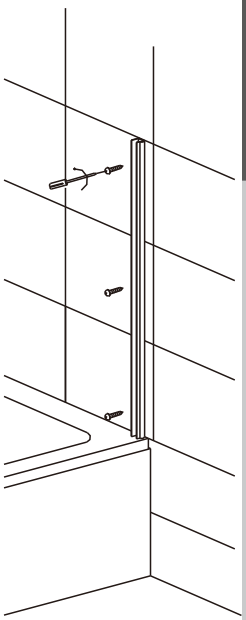

Ⓑ x3

5

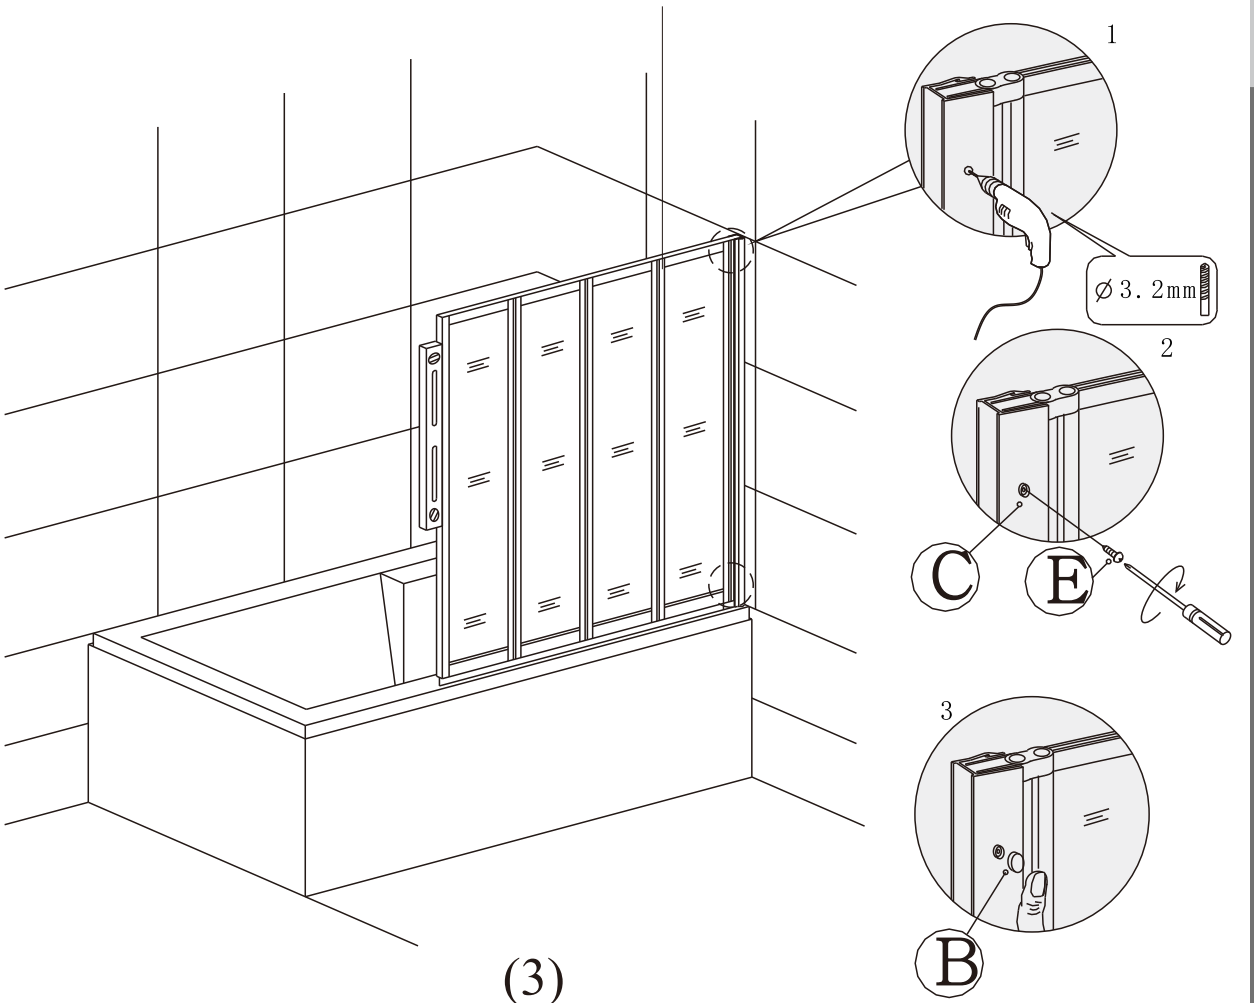

6

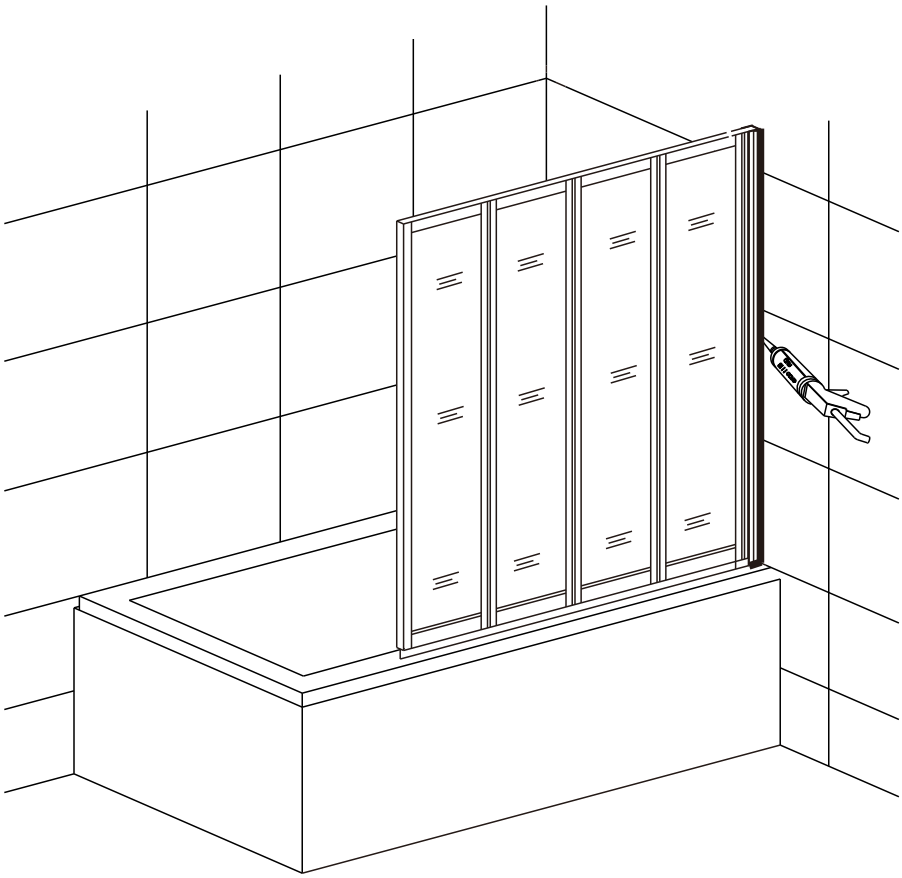

Apply some silicone on the outside edge of the bath screen(between the wall profiles and wall and between the frame and the bath) to enhance waterproof. After installation, it needs 24hours for silicone to dry before being put into use.

Cleaning & maintenance

Clean the sundries regularly to prevent the drain from being jammed. Usually, clean the shower enclosure by mop with mild detergent.

Don't clean the shower enclosure with irritant detergent, such as alcohol, gasoline or other chemical cleaner.

Should there be any dirty stains on the shower enclosure,you may clean it by calico with toothpaste,but you need to clean it with water afterwards.

After the installation is completed, if you find there is much noise when the glass door moves, you may add small quantity of lubricant onto the roller wheel, slipping hook and the track.